





Tools needed for the easy installation of an Architectural Specialties, Inc. curb  
mount skylight:

Be prepared. Make sure you have all the tools you will need before you start the job.

- Measuring tape
- Carpenter's square
- Stainless steel nails
- Hammer
- Keyhole hand saw
- Power saw (or hand saw)
- butyl caulking

- Shingle nail puller
- Joint compound & plaster knife
- Tin snips to trim shingles
- Sand paper
- Paint and paint brush
- Ladder
- Roofing mastic & trowel

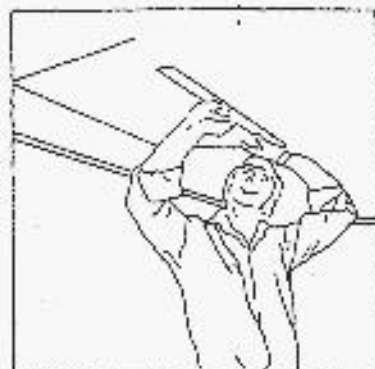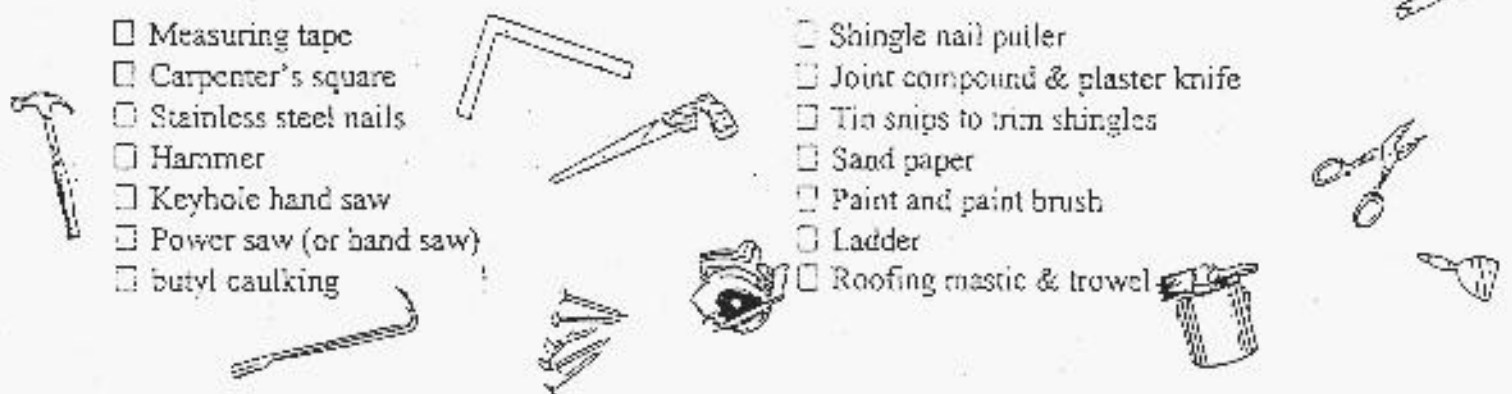

1

Measure and mark the ceiling location for your skylight. Position it, as accurately as possible, between ceiling rafters to keep your work to a minimum.



2

Cut squarely through markings on the ceiling; remove ceiling material and any insulation in the open area.



3

Remove shingles and cut through roof to match ceiling opening.



4

Frame wooden 2X skylight curb to proper inside measurement. Nail curb to roof using 16p nails. Skylight curb is now ready for sheet metal flashing!