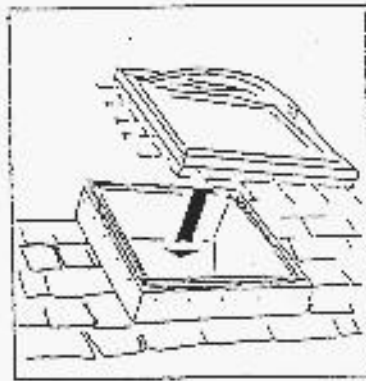
**5**

Install sheet metal flashing around curb. Apply roofing mastic between flashing and curb. Nail flashing to curb with galvanized roofing nails.

**6**


Apply a continuous bead of caulk to top of 2X curb. Position skylight on the curb and nail/screw skylight to the curb.

**7**

Complete framing from within with drywall, siding, or other material. Cover exposed edges of opening with 90° corner trim strips and finish bottom with moulding.

**8**

When using drywall, cover exposed nails and corner trim with joint compound. Let dry, sand to smooth, then paint frame and corners to match ceiling.

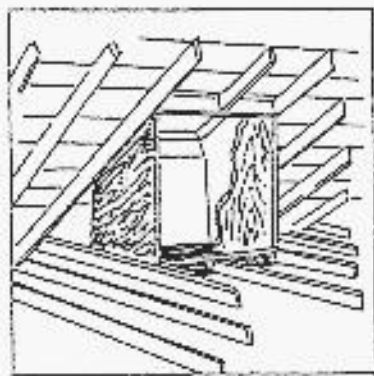**9**

When a well liner is required you may want to install your skylight in areas where the ceiling and roof are separated by attic space. This will require a well liner, as shown.

- 1) Frame in space between rafters and ceiling joists at the four corners of the opening.
 - 2) Use any available material (drywall, siding, etc.) and cover from the roof to the ceiling lines.
- Finish should be light in color to reflect light. Well liner should be insulated as required.